


GPU-45A

Software Update Quick Guide

This instruction will tell how to download new software to the GPU-45A systems.
Please note that all detector settings/ Screens will be erased. All these data must be re-entered after the update.

- Download the new software to an empty USB stick.
- Turn the Monitor Off.
- Open the door. And place the USB Stick in the empty USB Slot in the PLC. See picture.
- It can be necessary to remove the cover from the cable ducts to get access.

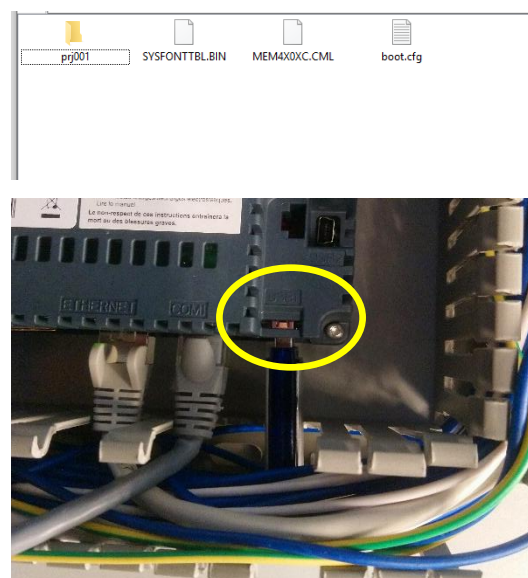

geopal®

Bygmarken 19 • DK-3520 Farum
+45 4567 0600 • info@geopal.dk • www.geopal.dk



PENDING



ITS-I 23ATEX036745




DBI req. no 233.301




DIC444QMS

GPU-45A


- Close the door and turn the power On.
- Activate the offline menu by tapping first the upper left, then the lower right corner of the screen. This should be completed within 2 seconds.

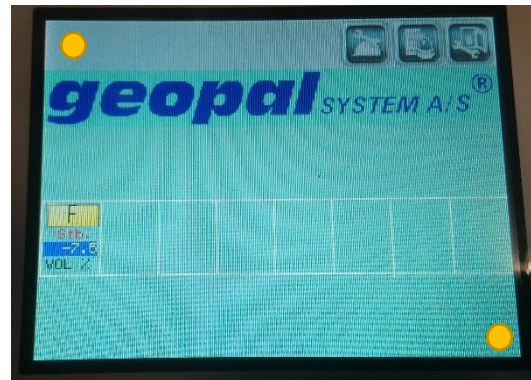

- Tap the **arrow** in the lower left corner once.

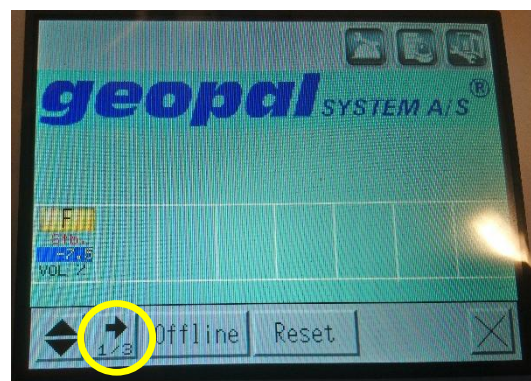

- Tap the **SD/USB** button.

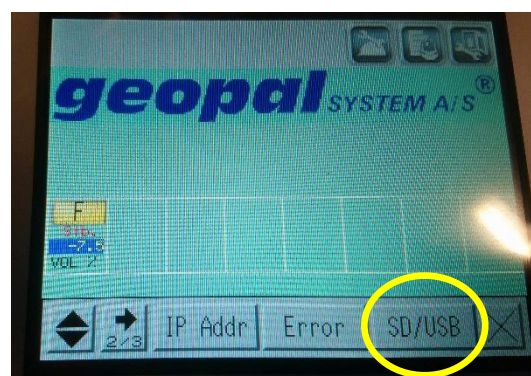

geopal[®]

Bygmarken 19 • DK-3520 Farum
+45 4567 0600 • info@geopal.dk • www.geopal.dk



PENDING


ITS-I 23ATEX036745

DBI req. no 233.301


DIC444QMS

GPU-45A


- Tap the **USBstart** Button.
- The PLC will start rebooting using the files on USB Stick.

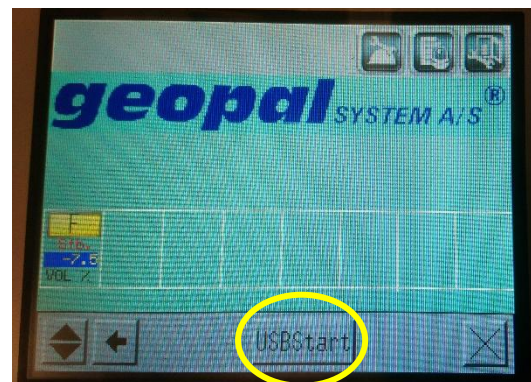

- When ready change the language if necessary, to English.
- Tap the **Download (->Display)** Button.

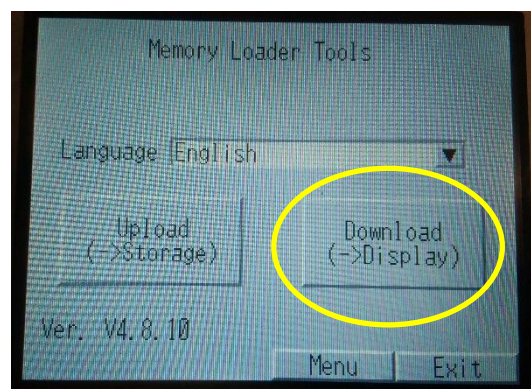

- Tap the **Start** Button.

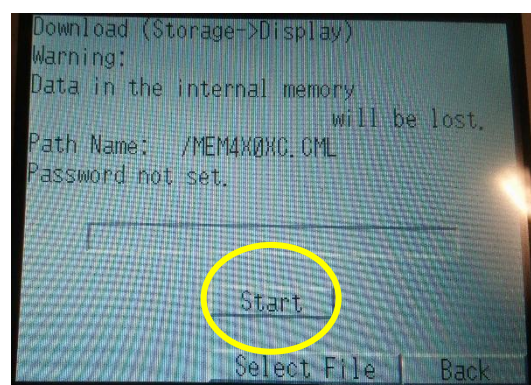

geopal®

Bygmarken 19 • DK-3520 Farum
+45 4567 0600 • info@geopal.dk • www.geopal.dk



PENDING

ITS-I 23ATEX036745


DBI req. no 233.301

DIC444QMS


GPU-45A

If notified about an incorrect password.


Tap the marked area and input the password.

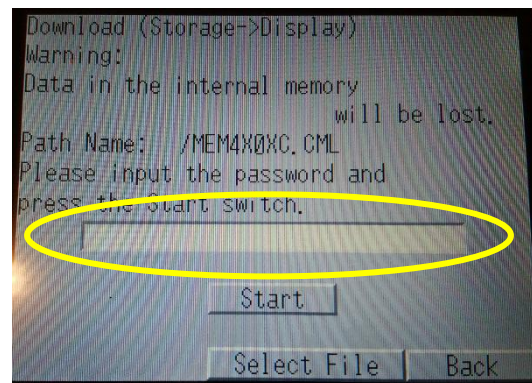

- Tap the **Yes** Button.
- The software is now being updated.

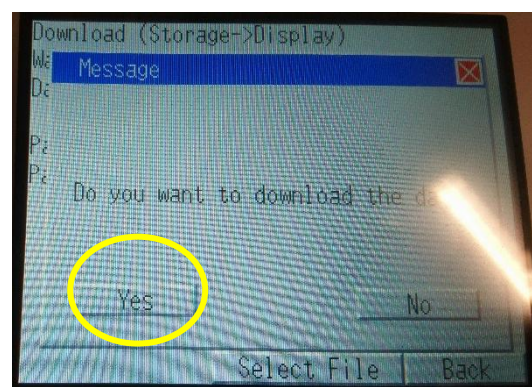

- After completion, tap the **Back** Button.

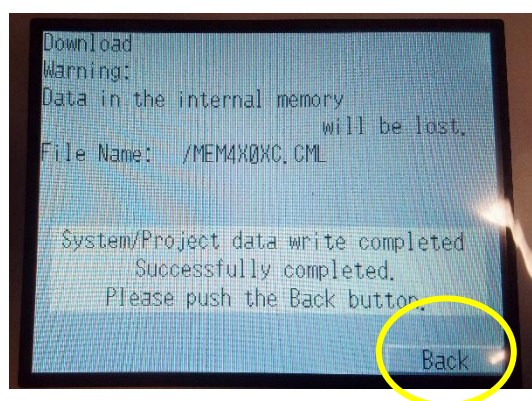

geopal[®]

Bygmarken 19 • DK-3520 Farum
+45 4567 0600 • info@geopal.dk • www.geopal.dk



PENDING



ITS-I 23ATEX036745



DBI APPROVED INSTALLATION COMPANY
AGA: 233.301


DBI req. no 233.301




DIC444QMS

GPU-45A


- Tap **Back** Button.

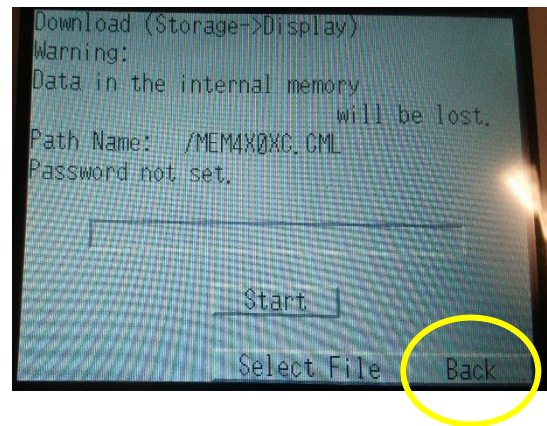

- Tap the **Exit** Button.

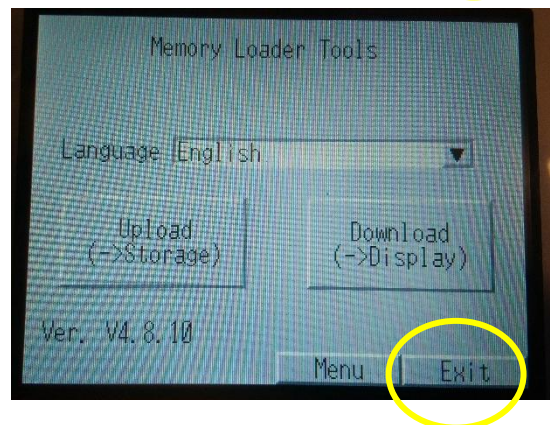

- Tap **Yes** Button.
- The system now restarts loading the new software.

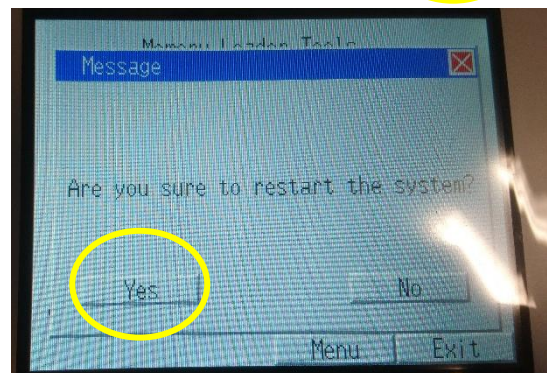

All data regarding detectors must be re-entered.

geopal[®]

Bygmarken 19 • DK-3520 Farum
+45 4567 0600 • info@geopal.dk • www.geopal.dk



PENDING

ITS-I 23ATEX036745

DBI req. no 233.301

DIC444QMS